


Yealink CP935W

Wireless Conference Phone

Wi-Fi Mode - Setup Guide

1 Before getting started, charge the battery

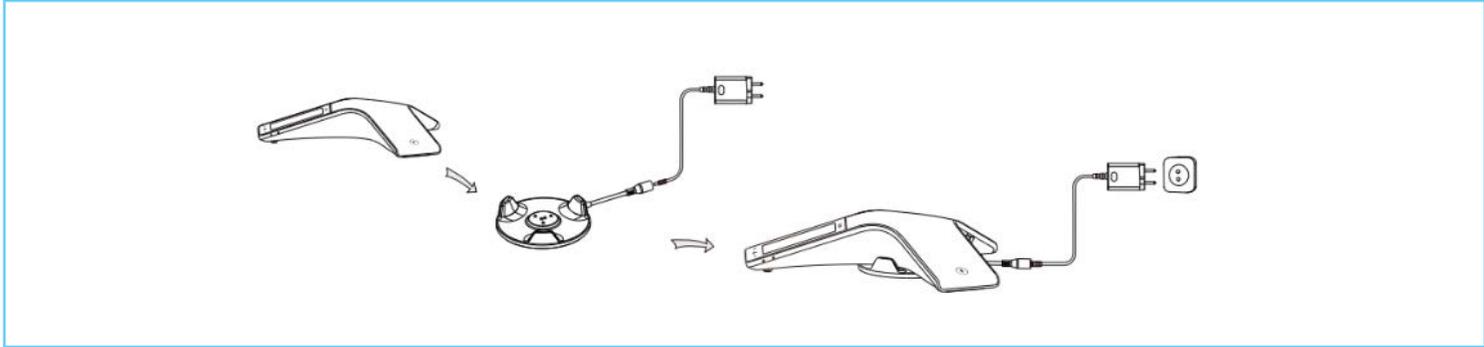


2 Enable Wi-Fi Mode

A one-time initial setup may be required for brand new equipment or any device that is reset back to factory default settings.

- Tap **Wi-Fi Mode** (a green check mark will then appear next to the Wi-Fi Mode option).
- Tap **OK**. The phone will restart.

If *Searching for Wi-Fi assistant...* warning is displayed, tap **Cancel**.

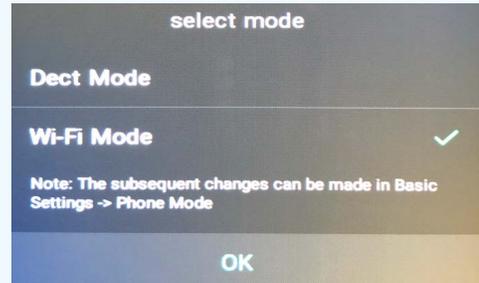

3 Connect To Wi-Fi

- Tap **...More** in the bottom right corner then tap **Wi-Fi**.
- If *No available wireless network, go to Wi-Fi settings now?* is displayed, tap **OK**.
- Select the desired Wi-Fi network from the list.
- Enter the Wi-Fi password (you may need to obtain it from your network administrator).
- Tap **Connect** and the phone will restart.



4 Final Checks Before Getting Started

- Your 10 digit phone number is displayed in upper right corner.
- Green phone icon is displayed next to phone number.
- Adequate Wi-Fi connection symbol is displayed in upper left corner.
- Correct date & time is displayed near top of screen.
- Battery symbol in upper left corner shows fully charged.



General Notes

- To Power Off, press and hold the **Home Button** (circle at bottom of screen) for ~3 seconds. Press **OK** when prompted to *Power off now?*
- To Power On, press and hold the **Home Button** for ~5 seconds or simply place the conference phone on the charging cradle.
- Obtaining the IP Address can be done by following these steps. Tap **...More>Status>General**.
- To check the firmware Version, tap **...More>Status>General**.
- To change Wi-Fi access point, tap **...More>Basic>Wi-Fi>select Wi-Fi network from list>enter Wi-Fi password if prompted**.